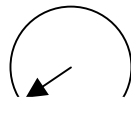






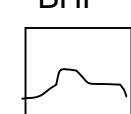
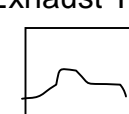
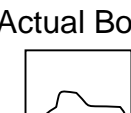

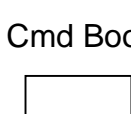
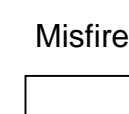
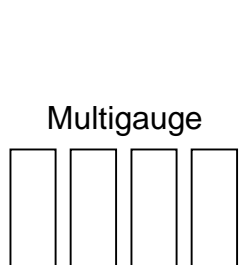
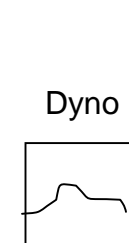


# liquidGAUGE QUICK GUIDE 5.1.9

Download the full user, assembly and installation manuals here,  
[www.racediagnostics.com/docs](http://www.racediagnostics.com/docs)

<p><b>BHP</b></p>  <ul style="list-style-type: none"> <li>↑ Range select, 200/300/400/500</li> <li>→ Calculation method MAF or Torque</li> <li>↓ No Action</li> </ul>	<p><b>Coolant /Air Temp</b></p>  <ul style="list-style-type: none"> <li>↑ No Action</li> <li>→ No Action</li> <li>↓ Units select, degC or degF</li> </ul>
<p><b>Torque</b></p>  <ul style="list-style-type: none"> <li>↑ Range select, 200/300/400/500</li> <li>→ No Action</li> <li>↓ Units select, ftlb or Nm</li> </ul>	<p><b>Lambda</b></p>  <ul style="list-style-type: none"> <li>↑ No Action</li> <li>→ No Action</li> <li>↓ Units select, Lambda or AFR</li> </ul>
<p><b>Boost</b></p>  <ul style="list-style-type: none"> <li>↑ MAF Boost / Vacuum Estimate</li> <li>→ No Action</li> <li>↓ Units select, psi or mbar</li> </ul>	<p><b>Exhaust Temp</b></p>  <ul style="list-style-type: none"> <li>↑ Alarm trigger temp up</li> <li>→ Alarm on/off</li> <li>↓ Alarm trigger temp down</li> </ul>
<p><b>Oil Temp</b></p>  <ul style="list-style-type: none"> <li>↑ No Action</li> <li>→ ECU17 Block 50 position 3 or 4 toggle or ECU1 Block 134 position 1 ( expect comms error)</li> <li>↓ No Action</li> </ul>	
<p><b>BHP</b></p>  <ul style="list-style-type: none"> <li>↑ Add torque line on/off</li> <li>→ Halt/Restart display</li> <li>↓ No Action</li> </ul>	<p><b>Exhaust Temp</b></p>  <ul style="list-style-type: none"> <li>↑ ECU1 Block 112 position 1 or 4</li> <li>→ No Action</li> <li>↓ Select CAT temp on/off for Graph Gauge and Multigauge</li> </ul>
<p><b>Actual Boost</b></p>  <ul style="list-style-type: none"> <li>↑ Add CMD boost line on/off</li> <li>→ Halt/Restart display</li> <li>↓ No Action</li> </ul>	<p><b>Speed RPM</b></p>  <ul style="list-style-type: none"> <li>↑ Select SPEED or RPM</li> <li>→ No Action</li> <li>↓ Units select, mph or km/h</li> </ul>
<p><b>Cmd Boost</b></p>  <ul style="list-style-type: none"> <li>↑ Add Actual boost line on/off</li> <li>→ Halt/Restart display</li> <li>↓ No Action</li> </ul>	<p><b>Misfire</b></p>  <ul style="list-style-type: none"> <li>↑ No Action</li> <li>→ No Action</li> <li>↓ Select cylinder bank 1,2,3,4 or 5,6,7,8 for Missfire and Timing Correction displays</li> </ul>
<p><b>Multigauge</b></p>  <ul style="list-style-type: none"> <li>↑ Air Cool N75 Boost</li> <li>→ No Action</li> <li>↓ Air Cool Exhaust Oil</li> </ul>	<p><b>Dyno</b></p>  <ul style="list-style-type: none"> <li>↑ No Action</li> <li>→ Once plot complete, boost toggle</li> <li>↓ No Action</li> </ul>